

DIY Installation Guide

Oslo Clear Wave Tape


Getting Started

IMPORTANT INFORMATION

- The Oslo Clear Wave Tape works off 100%, or double, fullness. This means tape length should be approximately double the length of your track (plus extra sewing for side hems in your curtains). While a shallower “S” can be created by putting the hooks closer together, Decorators Market does not recommend a larger fullness than 100%.
- The wave tape heading style uses approximately double the quantity of hooks compared to traditional pleated heading styles, therefore your track will require double the quantity of carriers (be it rings or runners). The number of hooks supplied with the Oslo Clear Wave Tape is approximately 8-9 per metre (or 1 hook every 12cm).
- Easy does it! Some patience and a bit of TLC will be required while the curtain settles. The wave tape heading should be styled and left to hang in a tightly stacked position for a few days while the fabric “settles” and the tape develops a “memory”.
- A maximum curtain weight of 4kg per metre of track is recommended for the Oslo Clear Wave Tape.
- “Stack back” for the 100% fullness wave size is approximately 240mm per metre of track. To allow for the curtain to sit off the glass when open, the track should be 20-30% wider than the window. This is a guide only and is dependent on the fabric thickness, lining choice, whether extra carriers have been used, whether there are bends in the track etc.

DON'T FORGET TO

- Carefully open the package and inspect the Goods for any damage during shipping
- Check that the enclosed quantity and accessories of your Goods matches your Order Invoice
- Notify Decorators Market within 7 days if you find any issues with the Goods

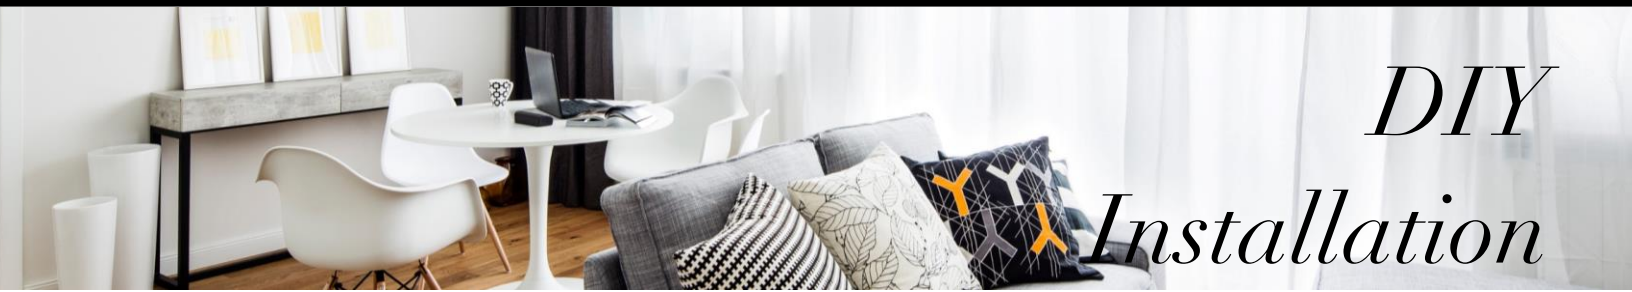

DIY Installation Guide


Instructions for Assembly and Hanging

DIAGRAMS




Left: Elevation view of tape and hooks.

Curtain hooks should be placed in every 8th pocket, or 120mm apart.

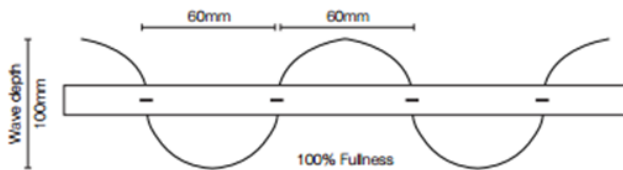

Left: Plan view of track and tape.

At 100% fullness, the depth or footprint of the S-wave is approximately 100mm. You will need to make an allowance for this when calculating your spatial requirements.

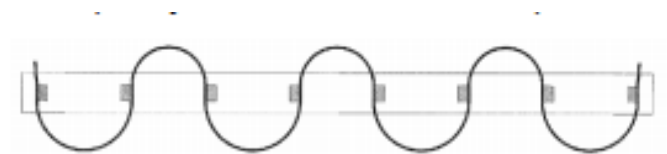

Left: Plan view of track with tape.

The tape should return to the window on the outside edges of the curtain. This ensures maximum coverage and a neater finish.

PROFESSIONAL SEWING TIPS

- Decorators Market recommends doubling the fabric over at the heading for extra stability and a more professional finish. When sewing curtains from sheer fabrics, doubling the fabric at the heading also helps disguise the tape.
- A stiffening tape can be used in conjunction with the Clear Wave Tape if the wave shape requires it (for example, if fabric “puckers”).