

DIY Installation Guide

Versatrak 32mm Square

Before You Start

TOOLS REQUIRED

- Measuring tape
- Pencil and paper
- Ladder
- Screwdriver
- Drill
- Spirit level
- Wall or ceiling plugs
- Appropriate fixing screws
- Straight edge (optional)

DON'T FORGET TO

- Carefully open the package and inspect the Goods for any damage during shipping
- Check that the enclosed quantity, colour, brackets and accessories of your Goods matches your Order Invoice and the completed Quality Control checklist enclosed
- Notify Decorators Market within 7 days if you find any issues with the Goods

PAY ATTENTION TO

- The mounting surface which needs to provide adequate structural support to withstand the weight of the curtains.
- Ensuring there are no hidden pipes, cables, asbestos or metal beams behind where the screws will be drilled in to. Decorators Market recommends you seek professional assistance before you install.
- Componentry such as glides, runners, hooks and grub screws can break, or get lost, if not handled with care

MOST IMPORTANTLY



Installing your own curtain rods and tracks is a relatively simple DIY task. However, if you are unsure about installing them yourself, we always recommend you contact a professional Installer first.

DIY Installation Guide

Installation Instructions

STEP 1 - INSPECT THE BRACKETS




STEP 2 - ESTIMATE THE BRACKET SPACING

1. Your curtain tracks come with the appropriate number of brackets based on the track length. We strongly recommend you use all the brackets supplied to install your curtain tracks
2. As a general guide, spacing between brackets should be between 600mm – 1200mm depending on the weight of the curtains (closer brackets for heavier curtains).
3. It is also recommended that the end brackets are installed at least 150mm from the ends of the track to ensure better weight distribution
4. To calculate the approx. spacing between the brackets, use the following formula:

$(\text{Total track length} - 300\text{mm}) / (\text{number of brackets} - 1) = \text{approx. spacing between brackets}$

Example: 3.3m curtain track supplied with 4 brackets


$(3300\text{mm} - 300\text{mm}) / (4 - 1) = 1,000\text{mm}$ spacing between brackets

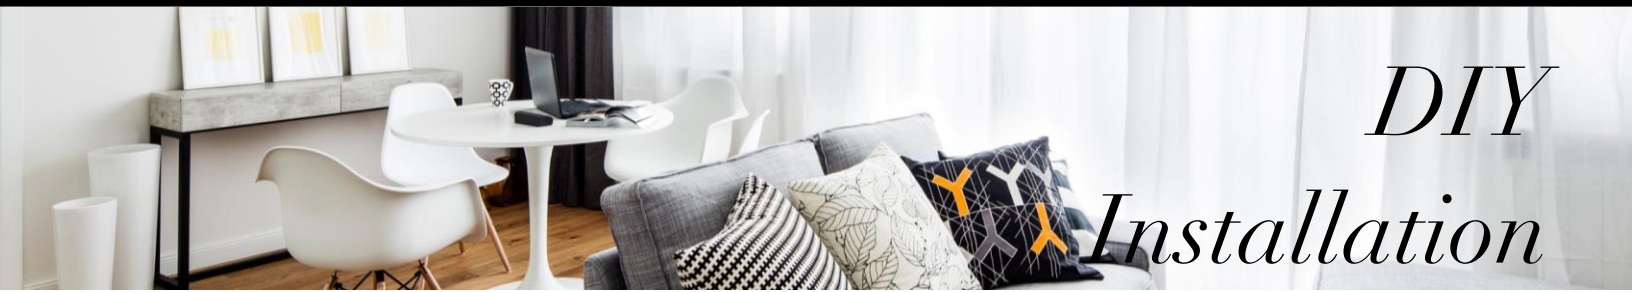

DIY Installation Guide


5. Adjust the spacing as required if you want to line the brackets up with any wall studs or ceiling rafters for a stronger installation
6. If you have heavy curtains that stack to one side, we also recommend reducing the bracket spacing on the side where the curtains will stack to approx 600mm
7. If you have an even number of brackets, or if your spacing doesn't include a bracket in the very centre of the track, you will need to calculate the distances from the estimated centre of the curtain track to the first brackets on either side of the centre
8. Record all of your bracket spacing details on a piece of paper

TOP VIEW (BRACKET SPACING)

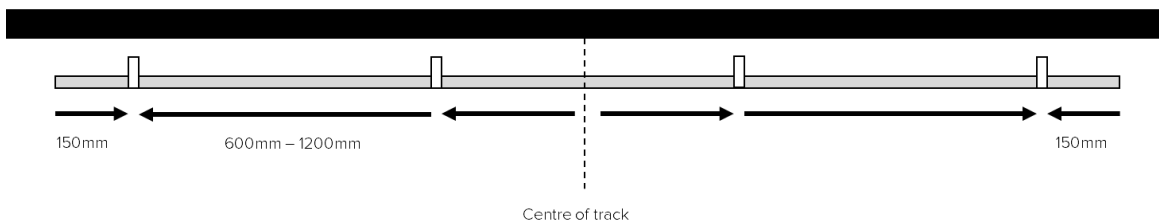


STEP 3 - MARK AND INSTALL THE WALL BRACKETS

1. Measure the width of the wall where the track is to be installed and lightly mark where you want the centre of the track to be positioned
2. Using your measurements calculated in Step 2(8), lightly mark where the first brackets on either side of the centre of the track should go
3. Lightly mark the approx. horizontal spacing of the remaining brackets based on the measurements you recorded in Step 2
4. **If Your Floors, Windows and Ceiling Are Level And Parallel**
 - a) If your floor, window frame and ceiling are all level and perfectly parallel to each other, measure the height from the floor to one of the centre brackets and make a light mark on the wall for the height. If you've already had your curtains made, we recommend checking with your workroom on the height they used for determining the curtain drop
 - b) Working from the centre outwards, measure the height of the remaining brackets from the floor and use your Spirit Level to check that the marks you have made for the brackets are level
 - c) An alternate method if your ceiling is level and parallel to the floor is to measure down from the ceiling or cornice to the required bracket height

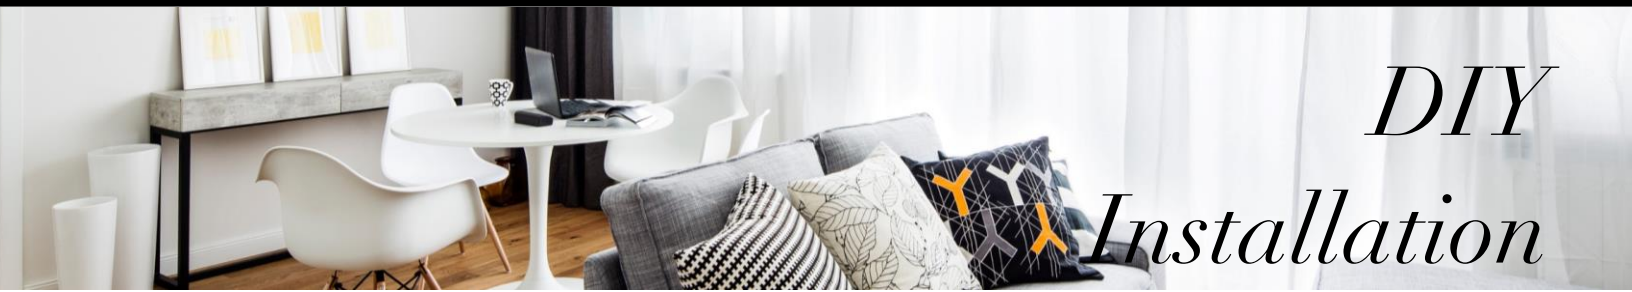


DIY Installation Guide

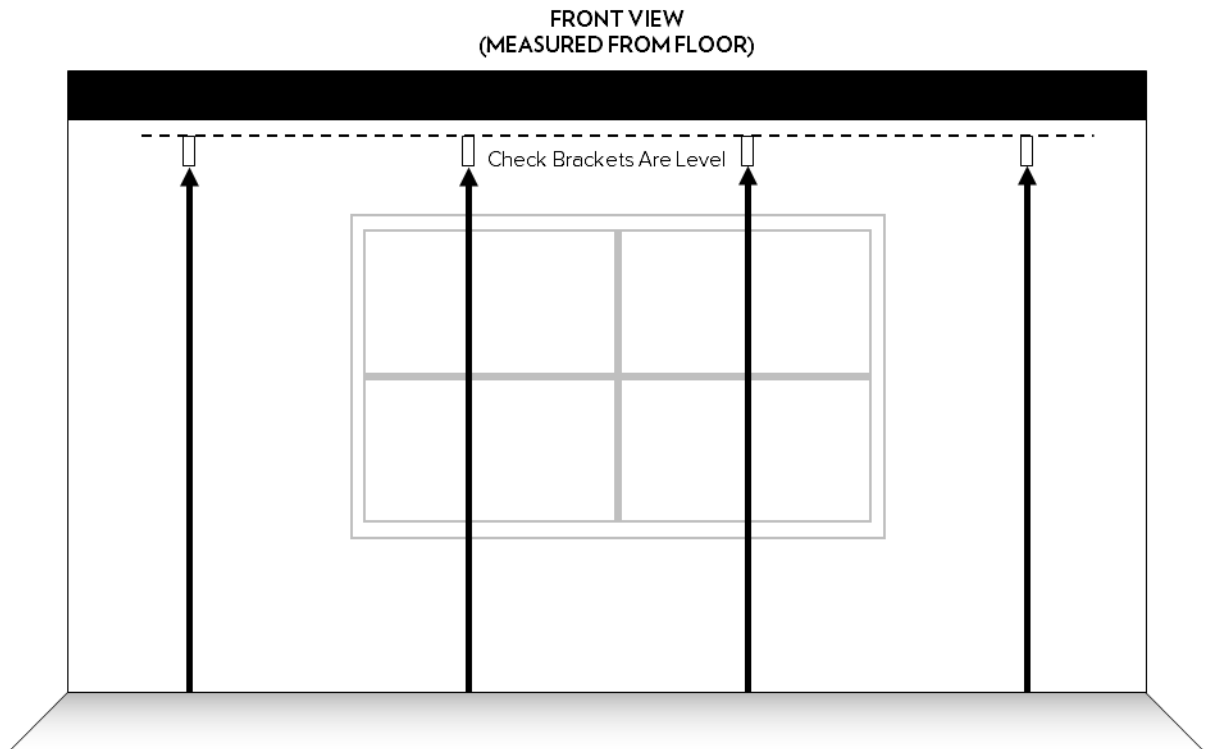


5. If Your Floors, Windows and Ceiling Are Not Level Or Parallel

- It's not uncommon for the floor, windows and ceiling to be at slightly different angles to each other (particularly in older homes) which means you need to choose what your curtains run parallel to
- We recommend aligning the curtains to the top of the window frame, or the ceiling, rather than floor. Whilst this may result in a gap along the bottom of the curtain and the floor, this is often less noticeable than the top of the curtain not being parallel with the ceiling
- If aligning to the ceiling or window frame, measure the required distance to the centre bracket and mark the wall
- Working from the centre outwards, mark the height of the remaining brackets, ensuring you use the exact same measurement from the window frame or ceiling
- Use your Spirit Level to check that the marks you have made are in a straight line with each other

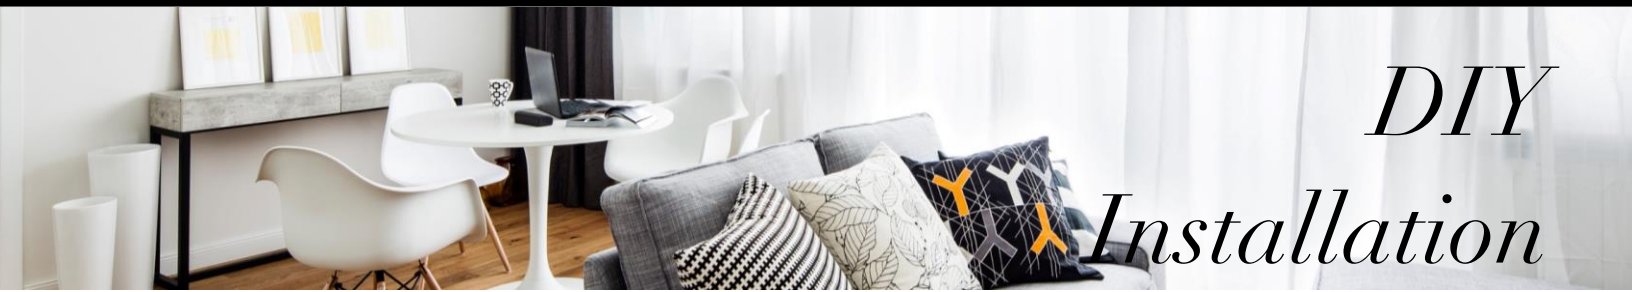


DIY Installation Guide

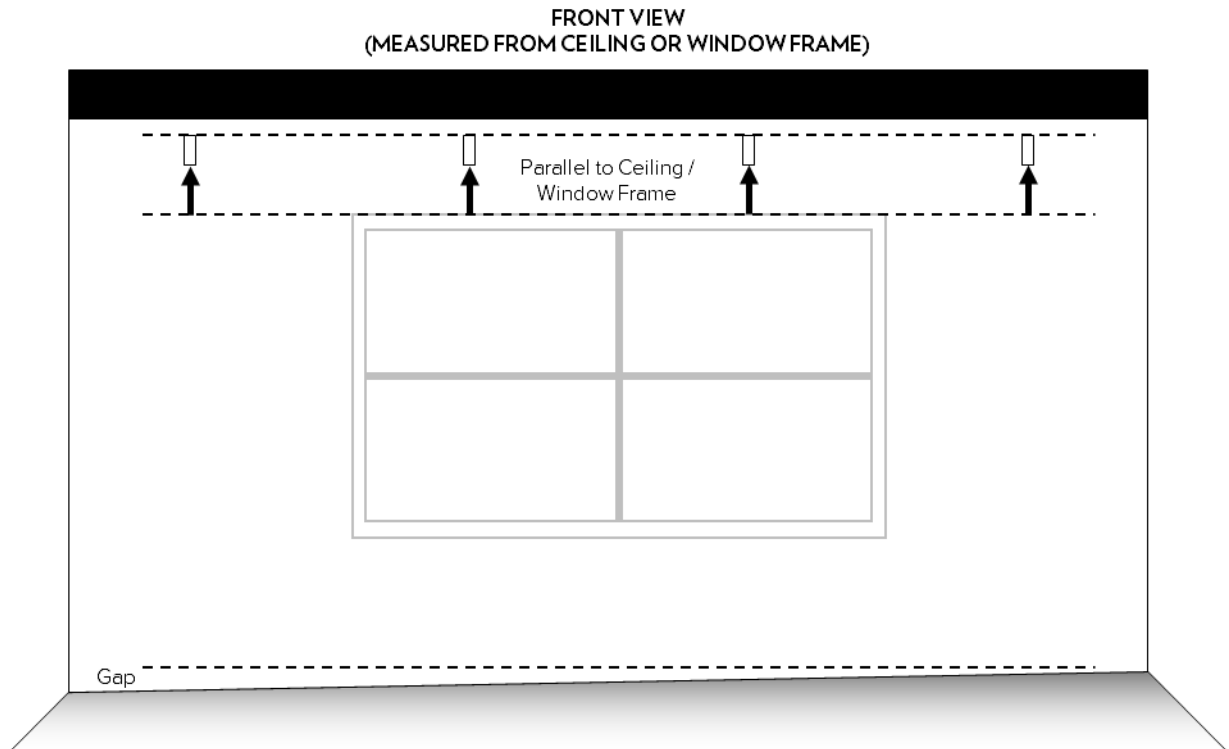

6. Check that the wall area behind each bracket is flush and suitable for fixing the bracket to it

NOTE: Before you install the brackets, make sure you have selected an appropriate method for fixing them securely to your wall. Decorators Market recommends you consult a Builder or professional Installer about the best way to fix your brackets based on your wall type.

7. To install the brackets, we recommend starting from the centre and working your way outwards
8. Position the first bracket on the wall where your mark was, and use your pencil to mark the screw hole positions
9. Drill the holes based on your chosen method of fixing the brackets and insert any plugs as appropriate
10. Screw the bracket onto the wall and tighten firmly
11. Install the next bracket by repeating Steps 3A(8) – 3A(10)
12. Use your Spirit Level to make sure the two brackets are level
13. Repeat these steps for the remainder of the brackets

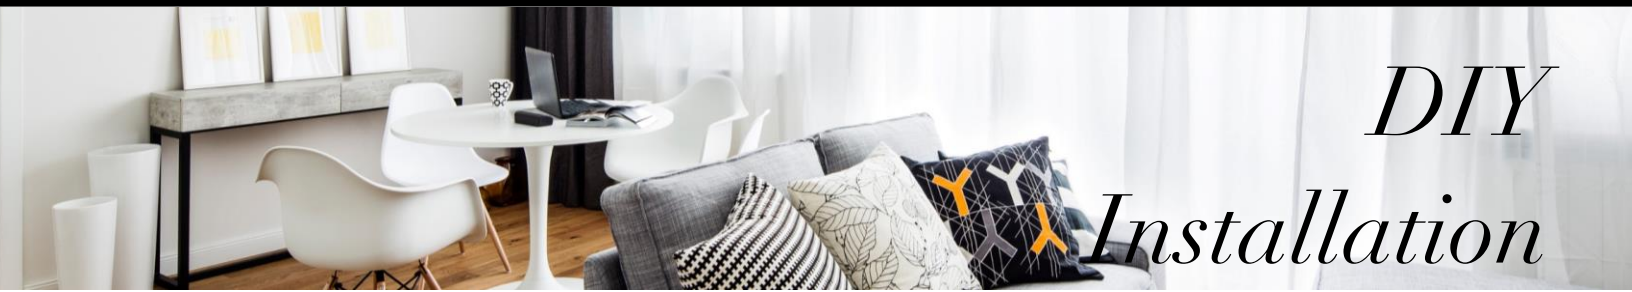

DIY Installation Guide

STEP 5 - ATTACH THE TRACK

1. Starting with one of the middle brackets, loosen the clip screw as far as it goes without it coming out completely
2. Lift the silver top of the bracket and gently push the rear groove of the track onto the bracket
3. Once track is in place, tighten the clip screw so the bracket clamps down on to the track
4. Repeat for each of the remaining brackets

